BioLite N2


Applicable Model: BLN2-ODB, BLN2-OAB, BLN2-PAB

1:1 Scale Drilling Template (Unit: mm)

How to Use the Template

1. Check if the **applicable model** name matches your product.
2. Open the file in Adobe Acrobat Reader.
3. Click **File** → **Print**.
4. Select **Actual size**.
5. Click **Print**.

Do not use a custom scale setting.

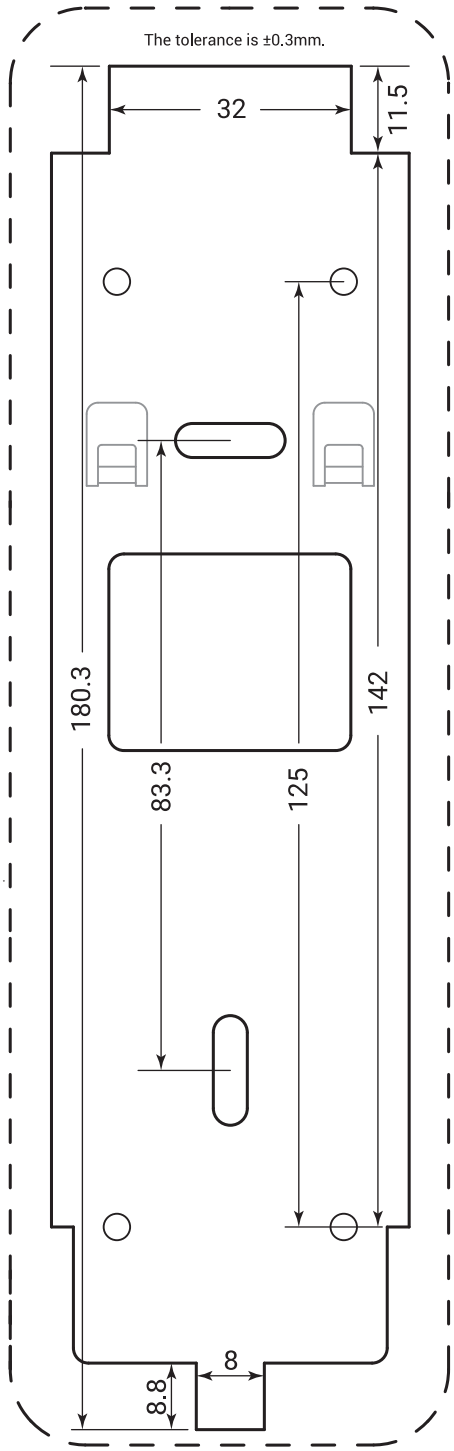

Suprema Inc.

17F Parkview Tower, 248, Jeongjail-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, 13554, Rep. of KOREA

Tel: +82 31 783 4502 | Fax: +82 31 783 4503 | Inquiry: sales_sys@supremainc.com | www.supremainc.com

© 2026 Suprema Inc. Suprema and identifying product names and numbers herein are registered trade marks of Suprema, Inc.
All non-Suprema brands and product names are trademarks or registered trademarks of their respective companies.
Product appearance, build status and/or specifications are subject to change without notice.

suprema